



International Mailing Systems of Dayton and Lima

Instructions to turn on Fractional on Current Product Machines
IN Series, IH Series, IM Series, IS Series

Press the "Menu" Key

Item 13 on the menu is "Supervisor", highlight it and Press OK

PIN code is "09430"

Press "3" (Default User Settings) then Press "OK"

Press "3" (Default Imprint Parameters) then Press "OK"

Press "4" (Fractional) then Press "OK"

Highlight the desired selection and Press "OK"

Use the Back Arrow key to return to the MAIN MENU

Press the Sleep/Wake Button twice

